

## Black Box's On Screen

- Turn Cutter off. Unplug the **USB** cord and the power cord from cutter.
- Move carriage to the middle of the cutter.
- Turn power on and off 5 times
- Click both red reset buttons about 5 times.
- Plug in power cord to the cutter and **USB** cord.
- Turn cutter on and it will reset.