

CUTTER IS STOPPING MID CYCLE OF CUT

Version 1.1

Step 1. In SignCut

Go to cutter section
Handshake = xon/xoff

Step 2. Check the following boxes

CHECK RTS
CHECK CTS
CHECK DTR
UNCHECK DSR
Baud 19200 OR 9600 works as well

Step 3. In device manager

Baud = 19200 OR 9600 works as well
Flow control hardware
Data bits 8
Parity none
Stop bits 1

Step 4. In Cutter

Change baud rate from 9600 to 19200 OR 9600 works as well

It worked on this test version of signcut, try it with the current version first, if not then download this version and do the above again.

<http://www.signcutpro.com/files/scpro1.exe>