

If the Cutter cuts one side but not the other

Take off the carriage (The device that goes back forth) cover and look for the brass housing. To the right of this housing you will see an aluminum piece with a black Allen screw; from here you are going to want to hold the carriage like a sandwich, one finger on the aluminum piece and the other on the knife catch (the piece that holds the blade holder). While holding the carriage like a sandwich, loosen the Allen screw and lightly close the hand that holds the carriage, tighten the Allen screw. Try to do a test cut, repeat until it doesn't tear paper and cuts evenly.

Tools needed with job

- 2.5 mm Allen wrench